Appearance and Buttons

Side View

Back View

Rear camera

Flash

Pogo pin

Battery Cover

Fingerprint unlock button


Loudspeaker

NFC

Unpacking Instructions

SIM card, TF card installation method

Use the silver tab on the top left corner to pull out the SIM card/TF card holder. Place the SIM card and TF card into the respective slots (as shown). Push the holder in completely:

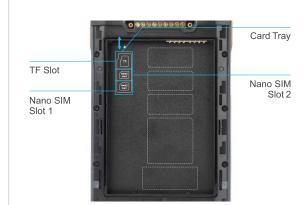

Note:

SIM card 1, 2 are Nano SIM cards.

Battery Installation

Install the battery in the direction as show. Push the lock buckle to the left (unlock). Place the back cover fully, then, push the lock buckle to the right(lock).


DT50 Quick Start Guide



Front view

Receiver



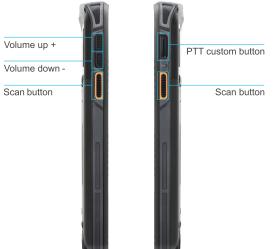



0 000000000

 


V 3.Y0.BB050034

Lock buckle

Power Adapter

PC Connections



Once the USB port has been connected, drag the notification bar from the top of the screen to display the USB setting interface (Figure 2).



Figure 1

Figure 3

.

Figure 2



menu shown in Figure 3

Tap this to activate USB preference menu shown in Figure 4 6:21 AM 😭 P ← Developer options Automatic system updates Apply updates when device restarts System UI demo mode Night mode Always off Quick settings developer tiles USB debugging Revoke USB debugging authorizations Bug report shortcut .

Click this to switch on

debug mode

← USB Preferences ф usв Select this option to access device storage. O Connected device Select this option to share the This device device data with the computer. Hea HSB for File Transfer Choose this option to transfer images. USB tethering O PTP Choose this option for charging ○ No data transfer the device.

Figure 4

On Windows PC, go to My Computer". Click on Removable Disk"to view and transfer device data.

4 • B

- 1. When the DT50 as a SLAVE connect to PC. 'This device ' option will be automatically selected.
- 2. When the DT50 as a HOST connect to other devices. 'Connected device' will be automatically selected.

Battery		Full power
		Medium power
	•	Charging
		Low power
Network signal		Good signal
		Unstable signal
	NONE	SIM card not installed
		SIM card error/no service

WiFi on No available wireless networks for connection WiFi WiFi connected WiFi switched off NFC switched on NFC

Precautions

- 1. Read all information in this guide before using the device to ensure safe and proper operation.
- 2. Please use the accessories that have been approved by this manufacturer and corresponds to this model. Use of any power source, charger, battery, etc. that has not been approved by this manufacturer may cause a fire, explosion, or other hazards.
- 3. Please use device and accessories within the specified temperature range. Equipment failure may occur when the ambient temperature is too high or too low.
- 4. Do not disassemble the product and its accessories. If the equipment or any of its components are not working properly, consult the after-sales service of the company promptly, or send the equipment to the after-sales service outlet for testing and maintenance.
- 5. The battery is made from a flammable and explosive material. Do not disassemble, squeeze, drop and make any other destructive operations on the battery. Do not place the battery in high temperatures.
- 6. Disposal of used batteries is subject to local relevant documents or policies regarding disposal of used batteries.

Warranty Policy

Thank you for using Urovo intelligent terminal series products. In the situation of quality problems, which arise from raw materials or production processes, during normal use of purchased products, Urovo Technology Co., Ltd. will be responsible for free maintenance within one year from the date

The company may provide repairs due to the user's failure to use the product according to the provided instructions of the product. However, corresponding service fee and component fee will be charged.

Warranty regulations:

- 1. Under normal circumstances, the warranty period of the device is 12 months (3 months for accessories), subject to the sales
- 2. During the product warranty period, under the normal use conditions (determined by our technical staff), the user will be entitled to a free warranty for damaged or faulty warranty parts.
- 3. During the warranty period, faults caused by repair, disassembly or modification of the product by a personnel other than our company, improper installation, improper use by the user (failure to follow instructions), serial number damage, accident or natural disaster, will not be covered under the warranty.
- 4. The warranty will expire immediately if any alterations are made to the warranty card.
- 5. Please show the equipment SN and purchase certificate for repair. The company reserves the right to interpret the above contents.





prompt appears Click"Shutdown"

Power on: Press and hold the power button until device vibrates

Shutdown: Press and hold the power button until the shutdown

Forced restart: Press and hold the power button for 10 seconds.

Charging Instructions

Connect one end of the USB cable to the adapter, and

the other end to the device. Charging cradle is

recommended for convenient charging.

Do not press the shutdown prompt. Device will restart.

USB cable